

HOW TO MEASURE FOR YOUR ISOCOVERS ISO-HUB

Selecting the right size ISOCOVER ISO-HUB for your equipment is a lot easier than you might think. All you need is a tape measure, and you are ready to go!

CLICK [HERE](#) FOR VIDEO TUTORIAL: **HOW TO MEASURE ISO-HUB**

WARNING: When installing or measuring for ISO-HUB, please follow all safety precautions and use proper and adequate protective safety aids such as: protective gloves and suitable protective clothing. Never use a metal tape for measuring purposes. Failure to do so may result in injury.

1. MEASURE FOR EITHER THE (1) CIRCUMFERENCE OR (2) DIAMETER:



CIRCUMFERENCE

OR



DIAMETER

NOTE: It does not matter which method of measurement you decide to use. Just remember that you only need to find your measurement using one of the two ways described above.

2. MEASURE FOR THE DESIRED WIDTH:



WIDTH

NOTE: After finding either the circumference or diameter, measure for the desired width to determine the width measurement of the application you want to insulate.



ISOCOVERS

Insulation Systems

3. FIND THE RIGHT ISOCOVERS ISO-HUB:

FOR EXAMPLE: The **CIRCUMFERENCE** (length) is 23in and the desired width is 9in = **IH 0812.**

OR

The **DIAMETER** (length) is 8in and the desired width is 9in = **IH 0812.**

WIDTH

CIRCUMFERENCE	DIAMETER	6in (152mm)	12in (305mm)
0in - 6in (0mm-152mm)	0in-2in (0mm-60mm)	IH 0206	IH 0212
6in-13in (152mm-330mm)	2in-4in (60mm-102mm)	IH 0406	IH 0412
13in-19in (330mm-483mm)	4in-6in (102mm-152mm)	IH 0606	IH 0612
19in-25in (483mm-635mm)	6in-8in (152mm-203mm)	IH 0806	IH 0812
25in-31in (635mm-787mm)	8in-10in (203mm-254mm)	IH 1006	IH 1012
31in-38in (787mm-965mm)	10in-12in (254mm-305mm)	IH 1206	IH 1212
38in-44in (965mm-1118mm)	12in-14in (305mm-356mm)	IH 1406	IH 1412
44in-50in (1118mm-1270mm)	14in-16in (356mm-406mm)	IH 1606	IH 1612
50in-57in (1270mm-1448mm)	16in-18in (406mm-457mm)	IH 1806	IH 1812

NOTE: Now that you have your measurements, you can use the graph above to help you find the appropriate ISOCOVERS ISO-HUB part number. Diameter and circumference (length) measurements are listed in the table rows vertically and width measurements are listed in the column rows horizontally.



ISOCOVERS

Insulation Systems

4. GO AND ORDER ONLINE:

1. Go to shop.unitherm.com
2. Enter your part number in to the Search bar in the upper left-hand corner of the page
3. Click “**Search**” to get your ISOCOVERS ISO-HUB Insulation Jacket

CLICK [HERE](#) FOR VIDEO TUTORIAL: **UNI THERM SHOP WALKTHROUGH**